

YAMAN

TOKYO JAPAN

English User's Manual come with this product.

Please download the other language's User's Manual version from this link (<https://www.ya-man.co.jp/en/support/documents/>) or scan with QR code with your camera phone.

Please carefully read User's Manual to ensure safe and proper use of the device.



TO ACCESS SCAN WITH
YOUR CAMERA PHONE

User's Manual

Wearable Facial Beauty Device

Design Lift

YJMD0

Introduction

Thank you for purchasing a YA-MAN product.

- Do not use the device before reading the Safety Precautions (pages 3-11).
- Please read this User's Manual carefully for information on how to use the device properly and safely.
- After reading the contents hereof, be sure to keep this User's Manual in an accessible location.
- Make sure to include this User's Manual if you are transferring ownership of the device to another person.

Flow Chart of How to Use

1

After washing your face, condition your skin and put the Stretch Fit Sheet on your face


Remove the Stretch Fit Sheet from the protective sheet, and apply it around your eyes.



2

Turn on the device

Press the POWER ON/UP button down for 1 second or longer.

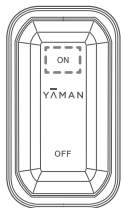

3

Set the controller


Set the POWER ON/UP button up and put on the controller.



4

Select EMS level

Press the POWER ON/UP button briefly to raise the level or press the POWER OFF/DOWN button briefly to lower the level.

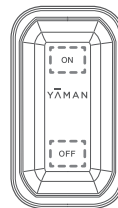

5

Turn off the device

The device will automatically turn off approx. 10 minutes after the device is turned on.

Table of Contents

Safety Precautions ————— p.3

Names and Functions of Components — p.12

Before Use ————— p.14

How to Use ————— p.15

After Treatment ————— p.19

Additional Information ————— p.21

● Troubleshooting ————— p.21

● Frequently Asked Questions ————— p.24

● Product specifications ————— p.27

After-sales service ————— p.28

Safety Precautions

- Read these Safety Precautions carefully before using the device in order to use it correctly.
- Use the device sensibly in accordance with the prescribed steps.
- Immediately discontinue use and arrange to have the device repaired if any abnormality occurs.
- Do not use the device in a defective state, as doing so could cause a physical harm to the user.
- The precautions listed in the User's Manual are very important. For your safety, please follow them carefully.
- Precautions are classified as DANGER, WARNING, or ATTENTION in order to clearly specify the level of danger and possible injury or damage that may occur if the device is misused.

Classifications of Precautions



DANGER

Improper use of this device poses a severe and likely risk of death or serious injury.



WARNING

Improper use of this device may pose a risk of death or serious injury.



CAUTION

Improper use of this device may result in an injury or property damage*.

Symbols



This symbol shows you what you must not do.



This symbol shows you what you must do.



This symbol shows you what you must be careful with.

*'Property damage' refers to damage affecting a dwelling, household belongings, or domestic animals and pets.

DANGER (Use and storage)

- **The following individuals should not use the device:**

Failure to comply may cause electronic medical devices to malfunction.

- ◆ Do not use the device in conjunction with any medical electronic equipment, including:
 - pacemakers or other implanted electronic medical devices;
 - artificial heart-lung machines or other electronic life-support medical devices; and
 - electrocardiographs or other worn electronic medical devices.



Prohibition

WARNING (Use and storage)

- **Do not use under the following conditions:**

Failure to comply may cause accidents or other problems.

- If you have existing or suspected heart disease or related disorders · Infants or those who are unable to express their intentions on their own
- If you are unable to sense temperature or stimulation · If you have an autoimmune disease

Consult a physician prior to use under the following conditions:

- If you have an acute disease · If you have an infectious disease · If you have a malignant tumor · If you have a febrile disease
- If you have high blood pressure or a blood disease · If you have a fever
- If you have sensory impairment due to severe peripheral circulatory dysfunction (e.g. diabetes)
- If you have a nerve damage · If you have a skin disease or atopic dermatitis · If you are a hospital outpatient and are taking medication
- If you have a pre-existing skin condition, such as an allergic constitution or contact dermatitis, or if you have a concern about your skin when using this device

- **Do not use in the following cases or on the following areas.**

Failure to comply may cause accidents or other problems.

- If your skin is damaged, experiencing a rash, inflammation, or other abnormalities · If you are under the influence of alcohol · Head
- Anywhere inside the mouth, around the pubic region, or any mucous membrane · Eyeballs · Eyelids (eye sockets) · Throat · Bulging moles
- Viral warts · Areas where you have broken a bone · Areas of internal bleeding, swelling or scabbing after cosmetic medical procedures
- * Avoid using the device for 2 weeks after cosmetic medical procedures. After this period, consult with a physician and only use the device if the physician confirms there is no problem (e.g. hyaluronic acid injections, silicone injections, Botox, thread lifts, double eyelid surgery, HIFU, etc.).
- Areas where metal was implanted by surgery (reconstructive surgery, plastic surgery, cosmetic surgery, etc.)

- **Do not use the device continuously for an overly long time (for example, through commercial use).**

- **Do not submerge the controllers into water.**

Failure to comply may cause an injury or a failure of the device.



Prohibition

WARNING (Use and storage)

- Keep the device away from children and do not allow them to use it unsupervised. Do not allow children to play with the device.
- Do not allow children or disabled persons to use the device on their own. Do not allow persons who are unable to express their intentions on their own to use the device. Children should use the device only under the supervision of a guardian who has given their consent.



User
restrictions

Failure to comply may cause an accident or an injury.

- Do not place the device on an unstable location. Do not drop or strike the device. Do not place heavy objects on the device.



Dropping
prohibited

Failure to comply may cause an injury or a failure of the device.

- Do not use the device for any purpose or in areas other than those stated in the User's Manual.

Failure to comply may cause an injury or a failure of the device.



Non-intended
uses prohibited

- Do not use the device when an odor or abnormal generation of heat is detected.

Failure to comply may cause a damage or an ignition of the device.



Use prohibited
when an odor
or abnormal
generation of
heat is detected

- Do not disassemble, attempt to repair or modify this device in any way.

Failure to comply may cause a fire, electric shock or other injuries. Contact your local distributor for an advice on repairing the device.



Disassembly
prohibited

CAUTION (Use and storage)

- Do not use the device on parts other than the face.
- Do not allow the device to come into contact with another beauty device or electronic appliance while the power is on. Do not use with other electronic products (electric blankets/bed sheets, heated tables, etc.) at the same time.

Failure to comply may lead to accidents due to malfunctions.

- Do not use together with another electronic device (beauty equipment and such others).

Failure to comply may cause a skin problem or malfunctioning of the device.

- Before each use, check the device for any cracks, deformation, or other damage, and check that the Stretch Fit Sheet is not torn. Do not use if you see any sign of damage or failure.

Failure to comply may cause potential skin problems such as scars or worsening of symptoms.

- Do not bring any object like a metal sheet close to the controller attachment parts.

The parts may come off, resulting in a loss of function.



Prohibition

- Do not use, store, or charge the device in the following locations:

- In bathrooms or near bathtubs, showers, washbasins or other containers filled with water
- Dusty areas
- Outdoors or a location where there is exposure to direct sunlight
- Uneven or unstable location, or a location where there is vibration or shocks
- A location where there are strong radio waves or magnetism
- Near a flammable substance (such as alcohol, thinner, benzene, nail polish remover or spray).
- A location where there is exposure to oil smoke or steam
- A location that may become hot, such as near a heating device (e.g. a heater)
- A location with drastic temperature changes (for example, near an air conditioner or heater)

Failure to comply may cause a fire, electric shocks, accidents, malfunction of the device, falls or injuries.



Prohibition

CAUTION (Use and storage)

- Do not overuse the device.

For usage time and frequency, follow the instructions in the User's Manual.

Failure to comply may cause physical injuries.



Prohibition

- Do not use while driving.

Failure to comply may cause accidents or injuries.

- Be sure to comply with the following items.

- Avoid using the device for longer than the set time.
- Do not use the device in combination with peeling care items.

Failure to comply may cause an accident, injury, or a failure of the device.



Must Comply

- Be sure to use the device only for the following lengths of time.

As a general guide, use the device once a day for ten minutes, two to three times a week (a maximum of twice a day).

If using it continuously, do so after an interval of 5 hours or longer.

- Do not use the device continuously. Please allow intervals of at least 5 hours between treatments.

The above information is a guideline only. Please check your skin condition while using the device.

Using the device continuously may cause an skin injury or the generation of heat.

- If you feel an unpleasant tingling on your skin, reduce EMS level (intensity).

Failure to comply may cause a damage to your skin.



Must Comply

- Make sure that there is plenty of moisture between your skin and the Stretch Fit Sheet, such as by using lotion.

Transfer of EMS may become difficult if there is not enough moisture. This may cause deterioration in effectiveness or skin problems.

CAUTION (Use and storage)

- **Ensure that the temperature of the usage environment is properly maintained.**

The range of environmental temperature in which the device can be used is from 10 to 35°C. Verify the ambient temperature of the location where the device will be used. The device may not adjust to the ambient temperature of a new location immediately after being moved to the new location. Failure to comply may cause the device to fail or malfunction.



Must Comply

- **If you feel that a contact lens is moving while using the device, stop the use immediately and remove the contact lens before use again.**
- **Those who are currently undergoing dental treatment (implants, orthodontics, metal crown, etc.) or have dental fillings must adjust the level when using the device.**
They may experience unpleasant sensations in their teeth due to the EMS stimulation.

- **During the treatment, carefully check that your skin is not showing any abnormalities. Stop using the device immediately if you start to feel pain, fatigue or see any skin reactions during use.**

Stop using the device immediately if the treatment does not agree with your skin.

If symptoms persist the following day and beyond, consult a physician.



Must Comply

- **Use only Level 1 for the EMS level (intensity) upon the first use until you become familiar with how to use the device.**

Failure to comply may cause an accident or an injury. Be sure to check your skin condition while using the device.

WARNING (The power supply)

- Do not damage, modify, apply unnecessary force or bundle the USB charging cable.

Do not place heavy objects on top of the USB charging cable, or allow them to be put in between objects.

Failure to comply may cause a fire or electric shock.



Careless or reckless use prohibited

- Do not move or lift the controllers by pulling the USB charging cable.

Failure to comply may cause an electric shock, short circuit, fire or disconnection.



Do not pull the cord to move the device

- Do not use the device if the USB charging cable is damaged or if the USB port is loose.

Failure to comply may cause an electric shock, short circuit or fire. Contact your local distributor for an advice on repairing the device.



Use of a damaged electric circuit prohibited

- Do not wash or submerge the USB charging cable in water.

Failure to comply may cause an electric shock, short circuit, fire, or malfunction of the device.



No contact with water

- Be sure to turn off the power when not in use and during cleaning. Remove the AC adapter (commercially available) and USB charging cable from the controller and the power outlet when not in use. Do not insert or disconnect the plug with wet or damp hands.

- When unplugging the USB charging cable from the device and the USB port, do so by gripping the plug (do not touch the metal parts). Do not insert or disconnect the plug with wet or damp hands.

Failure to comply may cause an electric shock, short circuit or fire.



Removing the plug

WARNING (The power supply)

- Do not dispose of the device in a fire or heat it. Do not use, charge or store in a high-temperature or high-pressure area.

The device features a built-in rechargeable battery. Failure to comply may lead to the generation of heat, a fire or explosion.



**Combustion
warning**

- **Make sure the AC adapter (commercially available) and USB charging cable are fully inserted into the electrical outlet. Be sure to check the plug configuration and the voltage of the power outlet before using the device in countries other than Japan.**

Failure to comply may cause a fire, electric shock or a failure of the device.



Must Comply

- **If any problem occurs, turn off the power immediately.**

Refrain from using the device if faulty operation, smoke, abnormal noise or odors are detected or if it is otherwise operating in an abnormal state.

- **Always use the dedicated charging USB cable.**

Failure to comply may cause an electric shock, short circuit or fire.

- **Do not exceed the rated capacity of a power outlet or wiring accessory (do not connecting too many plugs in one outlet).**

Failure to comply may cause an electric shock, short circuit, fire, or malfunction of the device.

- **Before charging the device, check to make sure that the charging terminals are not wet with water or skin-care product.**

Failure to comply may cause an electric shock, a short circuit or a fire.

* The USB charging cable included with the device is for a recharging use only.



Must Comply

WARNING (When using outside of Japan)

- Use only with a 5 V DC USB power supply (warranty is only available in Japan).

Failure to comply may cause a fire or electric shock.



Must Comply

- Be sure to check the plug configuration and the voltage of the power outlet before use.

Failure to comply may cause the generation of heat, a fire, or a malfunction of the device.



**Combustion
warning**

- The plug configuration and voltage may vary depending on the region and the type of accommodation.
Always be sure to check for its compatibility before using the device.
- For information about plug adapters, consult with a travel agent or a consumer electronics retailer.

Names and Functions of Components

The design and specifications of the device and attached accessories are subject to change for improvement purposes without notice.

Accessories

- Stretch Fit Sheet (1 set for right and left eyes)

* Do not dispose the attached protective sheet because it is used for a storage.


- Magnetic USB charging cable*

* Do not use these accessories with any products other than Design Lift.


- User's Manual

Main Unit (controller): 1 set right and left eyes

● Front view

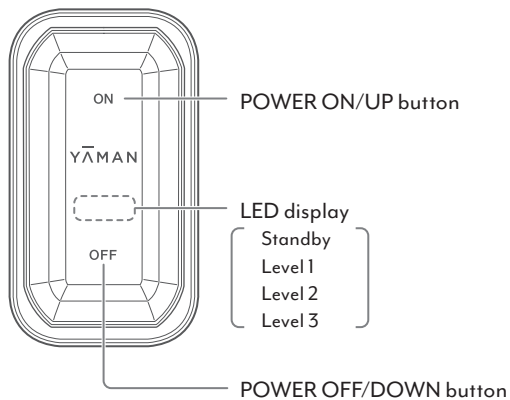

● Back view

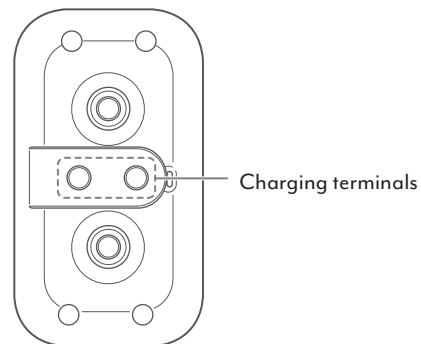


Stretch Fit Sheet (with protective sheet)


It is attached to the protective sheet.

* Do not dispose the protective sheet because it is used for storage.

● For right eye

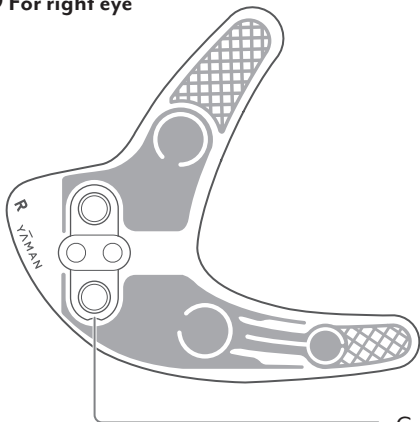

● For left eye

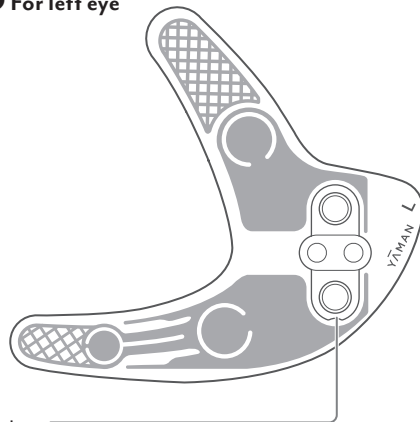

Controller attachment parts

Functions

Auto Power Off

The device will automatically switch off approx. 10 minutes after it has been turned on.

Water resistance class



This product is IPX5 level waterproof (JIS waterproof class).

* The device is not completely waterproof. Do not submerge the device in water or leave it continuously under running water for 3 minutes or longer.

* The charging USB cable is not waterproof.

Before Use

Charge the Device

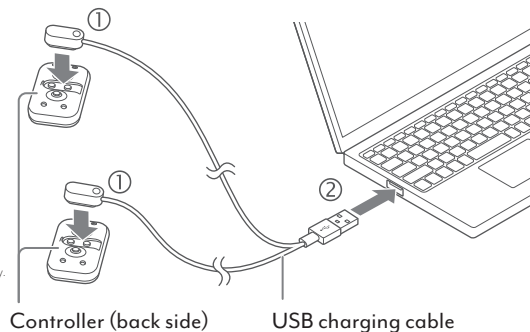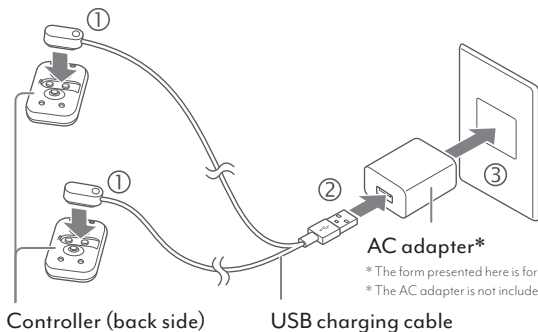

- Be sure to attach the magnetic charging terminal in the correct direction. Charging will not begin if the magnetic charging terminal is attached in a wrong direction.
- Fully charge the battery before using the device for the first time after purchasing.
- When using the device for the first time or when the device has not been used for a period of time, it is possible that you will be able to use the device for a short time only, even with a full charge. In such a case, charge the controllers again before using it.
- Please use the commercially available AC adapter.

Charging	Battery level: low	☉	☉	☉	☉ Flashing ● Solid lighting
	Fully charged	●	●	●	
When charging is complete	All the white lamps turn on and then turn off. Unplug the USB charging cable.				
Charging time	Approx. 2 hours (room temperature approx. 25°C)				
Operating time	Approx. 5 hours				

* Actual charging time and operating time will differ depending upon the remaining battery level and the charging environment.

ATTENTION

- If there is any water droplet or stains on the controllers or charging terminal, please be sure to wipe them dry before use. Charging the device with water droplets or stains on the device could cause a failure.

Safety Precaution before using the device: When using the device for the first time, always test for compatibility with your skin to prevent skin problems. Use the product on Level 1, and continue to use it only if you experience no redness or burning sensation on your skin. If you see any negative reaction on your skin, stop use immediately.

How to Use

Preparation


1 Prepare your skin and put your hair up if it is long




After washing your face to remove makeup, please use your own skin-care products to prepare your skin for treatment.

- If you use the device over makeup, it may cause dark staining on the skin. It will also make it more difficult for the Stretch Fit Sheet to fit closely.
- Do not use skin-care products which contain oil, such as oil-based serums. Failure to comply may cause product malfunctions or skin problems.

2 Apply the Stretch Fit Sheets around your eyes

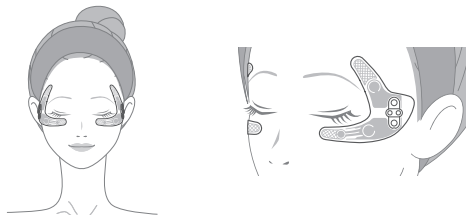


- Remove the Stretch Fit Sheets from the protective sheets and align it with the bags under your eyes, avoiding the eyebrows and the edges of the eyes while checking the right and left. It will be more effective to put on the Stretch Fit Sheet while lifting it upward.
- * Stretch Fit Sheets can be used approximately three times. After use, please attach the dedicated protective sheets to the Stretch Fit Sheets and store them.
- * Do not attach the controller before applying the Stretch Fit Sheet to your face.
- * There is no problem if it touches on your eyebrow, but the adhesion may become weaker.
- * **Make sure that skin-care products do not touch the magnet parts on the attachment part of the Stretch Fit Sheet controller.**

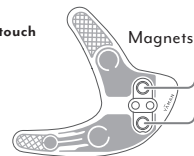

How to apply treatment

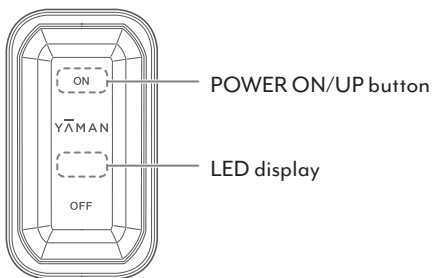

1 Turn on the device



Press and hold the POWER ON/UP buttons on the right and left controllers for 1 second or more to turn on the power.

Check that Standby Mode is displayed.

- In Standby Mode, the three display LEDs flash.
- The EMS level (intensity) is set to Level 0 (no EMS output) by default when the standby function is activated.
- If the center LED flashes when you turn on the power, the battery charge is low.

	LED display	Solutions
The center LED flashes twice		Battery is low. Charge the battery before the next use.
The center LED flashes five times		Battery is very low. Charge the battery.


2 Attach the two controllers to the Stretch Fit Sheet in Standby Mode.



Set the POWER ON/UP button up to attach the controller.

- Do not press any button of the controllers when you attach them to the Stretch Fit Sheets (There is no right/left distinction in controllers).

3 Select your choice of treatment level (intensity)

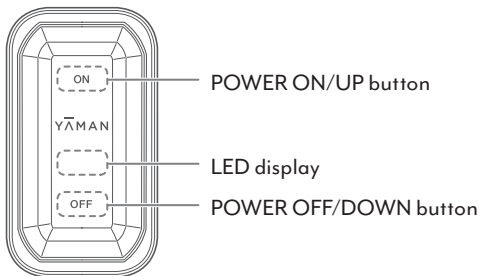

Press ON/OFF button of right and left controllers.

Operate the right and left controllers at the same time.

Make sure that you set the device at Level 1 when using it for the first time or until you become familiar with how to use it. If you perceive any skin abnormalities, immediately stop using the device.

- Press the POWER ON/UP button briefly to raise the level.
Press the POWER OFF/DOWN button briefly to lower the level.
- You can select among 3 treatment levels (intensity).
- **An electronic sound can be heard during operation.**
This is not an abnormality.



	LED display
Standby	☀ ☀ ☀
Level 1	● ○ ○
Level 2	● ● ○
Level 3	● ● ●



Point

- If you cannot feel any EMS or there is a difference in sensation between the right and left sides, refer to the section 'Troubleshooting' on page 21.

ATTENTION

- Use only Level 1 upon first use and until you become familiar with how to use the device.
- Be careful not to use excessive force when attaching each controller to the Stretch Fit Sheet. Failure to comply may cause damage to the controller.
- Do not raise EMS level (intensity) to the point where you feel tingling pain.

4 Turn off the device

The device will automatically switch off approx. 10 minutes after it has been turned on.

Hold the Stretch Fit Sheet with your hand and remove the controllers.

Remove the Stretch Fit Sheet slowly so that the skin around your eyes is not pulled.

- To stop the treatment during use, press the power OFF/DOWN button on the right or left controllers for over a second to turn off the device.
- After use, please attach the protective sheet and store the Stretch Fit Sheet.
- Stretch Fit Sheets can be used approximately three times. There is a possibility of reduced adhesion or tearing of the Stretch Fit Sheet after three uses, so please use a new Stretch Fit Sheet.

After Treatment

How to clean (the controllers)


To keep the product clean, please be sure to clean the controllers after each use.

1 Rinse under a weak flow of running water (especially the charging terminal on the back side).

* The device is not completely waterproof. Do not submerge the device in water or leave it continuously under running water for 3 minutes or longer.

2 Wipe off any moisture using a dry soft cloth or similar materials.

- After cleaning, store in a clean location with good ventilation.
- Do not leave the device with skin-care products still on it.

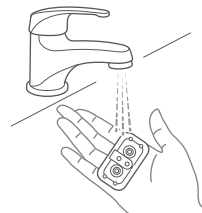

How to Clean (Stretch Fit Sheet)

1 Wipe by pressing lightly with a wet tissue from the top.

2 Attach the protective sheet (the clear film that was originally attached).

* Use non-alcohol wet tissues.



ATTENTION

- When cleaning the device, please be sure to turn off the device. Failure to comply may cause an electric shock, short circuit or fire.
- Never use alkaline detergent, alcohol, thinner, or nail polish remover.



Storage

- Attach the protective sheet (the clear film that was originally attached) to the Stretch Fit Sheet and store.
- Store in a clean, well-ventilated place out of the reach of children.
- Remove the AC adapter (commercially available) and USB charging cable from the controller and the power outlet when not in use for an extended period of time.
- Do not leave the device in hot or humid places, such as near flames, in bright sunlight or in a bathroom.

Maintenance and Inspections

- If you have not used the device for an extended period, inspect it carefully and check that the device works properly and safely before use.
- If the device is malfunctioning, go to 'Troubleshooting' (page 21) and attempt to identify the problem before arranging to have the device repaired. If the problem persists, contact your local distributor, making sure that you have your purchase details ready when you call.
- If the device malfunctions or appears damaged, please contact your local distributor.

Additional Information

Troubleshooting

If you perceive any abnormalities with the device during use, check to see whether any of the following symptoms are present.

Symptom	Possible causes and solutions
EMS feels weak (no sensation)	● Raise the level using the POWER ON/UP button (page 17).
	● The Stretch Fit Sheet is not properly attached to the skin. Please attach it correctly (page 15).
	● Low battery. Charge the battery (page 14).
	● Your skin is dry. Moisturize your skin with your own lotion or gel.
EMS feels strong (tingling, painful)	● Lower the level using the POWER OFF/DOWN button (page 17).
	● Your skin is dry. Moisturize your skin with your own lotion or gel.
You feel a difference between the right and left EMS	● Wipe off the dirt present at the location where the controller is attached (page 19).
	● The Stretch Fit Sheet is not properly attached to the skin. Please attach it correctly (page 15).
	● There is not enough skin-care product. Remove the Stretch Fit Sheet and apply more skin-care product to your skin.
	● Adjust treatment level of right and left controllers.
	● If the start timing is different for the right and the left, the intensity of the stimulation will also be different
	● Low battery. Charge the battery (page 14).
	● Due to the differences of skin condition and muscle mass on the right and left cheeks, the sensations may vary. Adjust the attachment position of the Stretch Fit Sheet to find a position that stimulates your muscles.

Symptom	Possible causes and solutions
<p>The device does not turn on</p>	<ul style="list-style-type: none"> ● Press the POWER ON/UP button down for 1 second or longer (page 16).
	<ul style="list-style-type: none"> ● The device has run out of power. Charge the battery (page 14).
<p>Device only operates for a few minutes even after charging</p>	<ul style="list-style-type: none"> ● The device will automatically switch off approx. 10 minutes after it has been turned on.
	<ul style="list-style-type: none"> ● Low battery. Charge the battery (page 14).
	<ul style="list-style-type: none"> ● The battery has expired. Consult the Global After Service (https://www.ya-man.co.jp/en/support/repair/) or your local distributor.
	<ul style="list-style-type: none"> ● The battery does not charge properly. Check that the LED is flashing white and that charging has started.
<p>The device does not start charging</p>	<ul style="list-style-type: none"> ● Connect an AC adapter (commercially available) to a power outlet (page 14).
	<ul style="list-style-type: none"> ● Connect the USB charging cable to the main unit (page 14).
	<ul style="list-style-type: none"> ● The charging terminals of controllers or/and USB cable may be dirty. Wipe off the dirt.
	<ul style="list-style-type: none"> ● Be sure to attach the magnetic charging terminal in the correct direction. Charging will not begin if the magnetic charging terminal is attached in a wrong direction.
<p>An electronic sound can be heard during operation</p>	<ul style="list-style-type: none"> ● This is a normal operating sound. This is not a malfunction.

Symptom

Possible causes and solutions

I cannot attach the Stretch Fit Sheet closely to my face

- The Stretch Fit Sheet is dirty. Clean before use (page 19).
If adhesion is weak even after cleaning, replace with a new Stretch Fit Sheet (sold separately) (page 29).
- If you have used a skin-care product that contains oil, wash your face and rinse away the sebum on your face.

The Stretch Fit Sheet comes off partway through the treatment

- You may be over-stretching the Stretch Fit Sheet. Do not over-stretch.
- The adhesion of Stretch Fit Sheet weakens after repeated use.
Use a new Stretch Fit Sheet after approximately three uses.
- The Stretch Fit Sheet may be dirty. Please clean it (Page 19).
- If you have used a skin-care product that contains oil, wash your face and rinse away the sebum on your face.

Frequently Asked Questions

Q

What is the recommended duration and frequency of use?

A

As a general guide, use the device up to 10 minutes at one time, 2 to 3 times per week.

* The device will automatically switch off approx. 10 minutes after it has been turned on.

* The above information is a guideline only. Please observe your skin condition and use the device accordingly.

* Check carefully to make sure that there are no skin abnormalities before using the device. Stop using the device immediately if the treatment does not agree with your skin.

Q

Can I use the device continuously?

A

As a general guide, use the device once a day for 10 minutes, two to three times a week (Maximum of twice a day). If using it continuously, do so at intervals of 5 hours or longer.

Q

Can I use the device in the bathroom?

A

The device is waterproof for cleaning. However, using the device while water, shampoo or bath salts are attached to the magnet on the attachment part of the Stretch Fit Sheet or controller, may result in malfunction or a defective experience. Do not use the device in the bathroom or in the bathtub.

Q

Can I use the device while sleeping?

A

Do not use the device while sleeping.

Q

There is a difference in stimulation between the right and left sides of my face

A

Due to the differences of skin condition and muscle mass on the right and left cheeks, the sensations may vary.
Adjust the attachment position of the Stretch Fit Sheet to find a position that stimulates your muscles.

Q

My skin is experiencing a rash/inflammation/itchiness

A

This is caused by the EMS stimulation. If symptoms persist on the following day and beyond, consult a physician.

Q

I feel some discomfort and tiredness

A

This is caused by the EMS stimulation. Stop using the device until your facial discomfort is gone.

Q

My teeth hurt when I use the device

A

You may feel tooth pain when you are undergoing dental treatment or if you have a silver-crowned tooth or filling. If you feel discomfort, consult a physician.

Q

Can I use the device immediately after sun tanning or shaving?

A

Using the device after sun tanning or shaving may cause inflammation.
If skin problems should occur while using the device, stop using the device immediately and consult a physician.



My skin is experiencing redness

A

The adhesion of the Stretch Fit Sheet may cause temporary redness. If the redness continues on the following day, consult a physician.



The Stretch Fit Sheet leaves a mark on my face

A

Depending on the condition of your skin, the Stretch Fit Sheet may leave a mark near the attachment position. However, there is no need for a concern as the mark will disappear with time.



Can I use the device on areas other than around my eyes?

A

No.



Can I use a Stretch Fit Sheet multiple times?

A

Stretch Fit Sheets can be used approximately three times. After use, please attach the protective sheet and store the Stretch Fit Sheet. There is a possibility of reduced adhesion or tearing of the Stretch Fit Sheet after three uses, so please use a new Stretch Fit Sheet.



Can I use the device on dry skin?

A

It is possible, but it is recommended to use the device after conditioning your skin with skin-care products.

Product specifications

Rated power supply	DC5V 0.5A
Power consumption	Maximum approx. 1 W (when charging)
Battery	Lithium-ion battery
Charging time	Approx. 2 hours *Charge time may vary with conditions of the charging environment.
Operating time	Approx. 5 hours (from a fully charged state) *Operating time may vary with conditions of use and the EMS level.
Water resistance class	JIS-compliant IPX5 class protection
Outside dimensions	Controller: approx. W23 X H41 X D13 (mm) Stretch Fit Sheet: approx. W80 X H72 X D4 (mm)
Weight	Controller: approx. 11 g (one piece) Stretch Fit Sheet: approx. 3 g
Materials	Controller: PC • PET resin Stretch Fit Sheet: PET resin/neodymium magnet/gel sheet
Country of origin	Controller: Made in China Stretch Fit Sheet: Made in Japan
Accessories	Stretch Fit Sheet (with protective sheet)1 set for right and left eye Magnetic USB charging cable.....One
Recommended environmental temperature	10°C to 35°C

After-sales service

Rechargeable battery

- The rechargeable battery is a consumable item (It is not covered by warranty).
- If the device no longer operates for more than a short period of time even after the battery has been recharged, the battery may have reached the end of its service life (the battery is expected to last 300 charge cycles).
- For battery replacement, please contact your local distributor or visit YA-MAN Global websites (<https://www.ya-man.com/en/>).

DISPOSAL INFORMATION

- Follow your local government rules on separation of trash for proper disposal of this product.

How to remove the built-in battery

The lithium-ion battery used in this product is a valuable recyclable resource.

- The battery must be removed from the appliance before it is disposed of.
- The device must be turned off and disconnected from USB charging cable when removing the battery.
- Use a screwdriver to remove the battery, being careful not to injure yourself.
- When removing the battery, be careful not to damage it with a hard object. * Failure to comply may cause the generation of heat or a fire.
- Follow your local government rules for proper disposal or recycling of this product.



Operation Steps


Refer to figures ① to ④ below to remove the battery.

* Remove the batteries from both controllers in the same procedure.




Below figures are intended to be used for disposing of the product, not repairing it.
Disassembling/repairing the device by yourself may cause a failure.


- ① Remove the four rubber plugs and screws on the back of the main unit and remove the main unit lid.

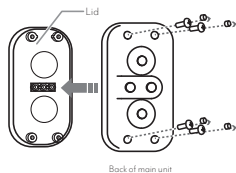


- ② Remove the two screws that hold the board.

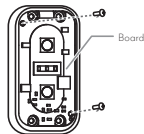

- ③ Turn the board over, disconnect the black and red cables, and remove the battery.

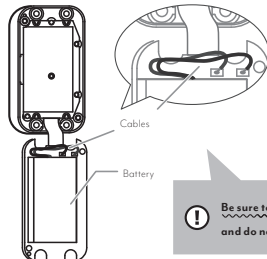

- ④ Wrap the disconnected cables with tape and secure them so that they do not contact each other.

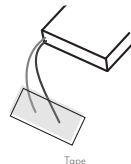

Be sure to disconnect cables one by one and do not touch the disconnected parts.

Contacts for overseas customers

- Please contact your local distributor or visit YA-MAN Global websites (<https://www.ya-man.com/en/>).

■ Marking Description



This marking indicates that this product should not be disposed of with other household wastes throughout the UK and EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources.
To return your used device, please use the return and collection systems or contact the retailer where the product was purchased, they can take this product for environmental safe recycling.



This marking indicates that it is a detachable supply unit.
This product must be charged only using the included detachable power supply.

Memo

