


How to Use

Electric Shaver HOT SHAVE Skin Pro YJEC1


Names and Functions of Components

Main Unit

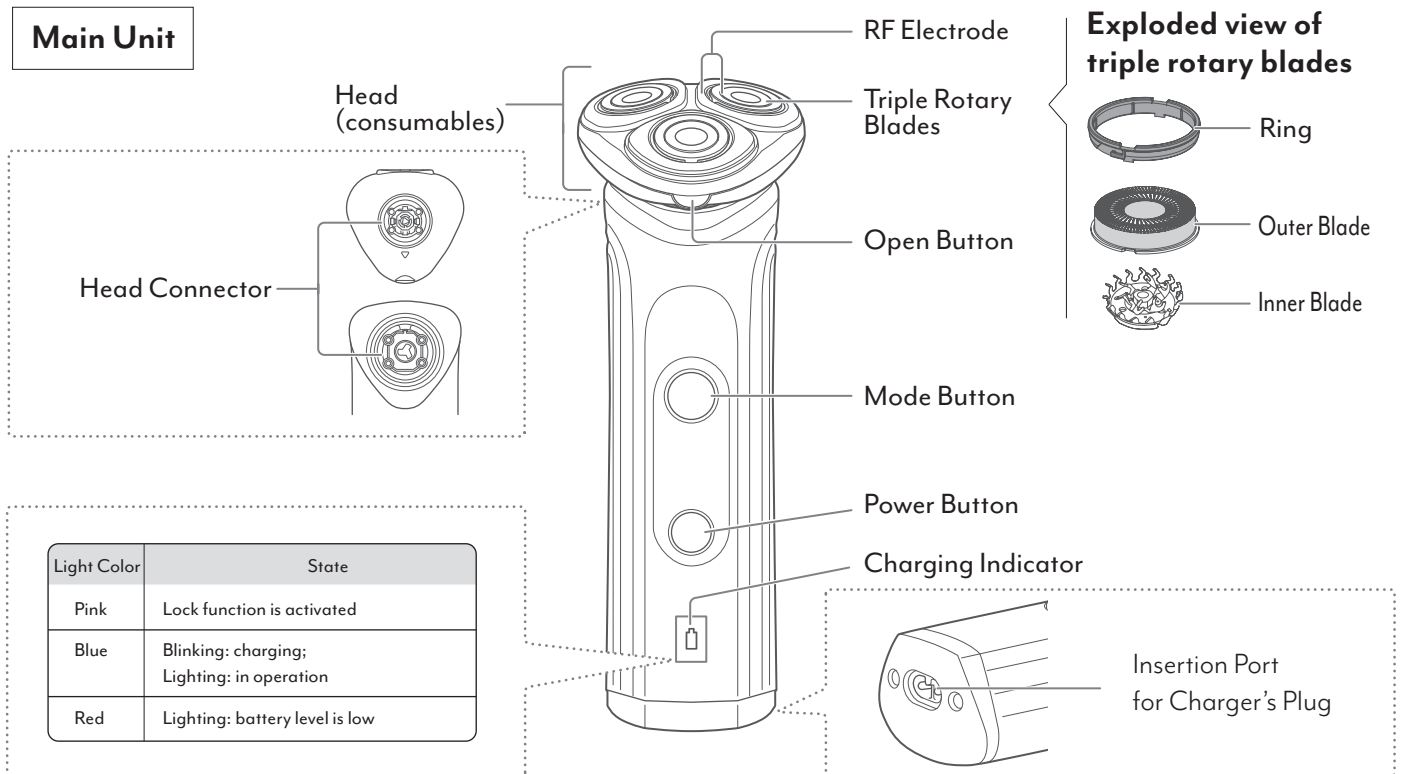

Accessories

- Trimmer



For sideburns and under the chin.

- Head Cover
- Cleaning Brush

- AC Adapter
- User's Manual

The design and specifications of the device and attached accessories are subject to change for improvement purposes without notice.

Modes

Mode	Functions	Mode button display
RF Shaver	For shaving while your beard is being directly warmed by RF. * This is the recommended mode for shaving.	RF SHAVER
Shaver	For shaving.	SHAVER
RF	For treating your skin with RF (Radio Frequency).	RF

How to Use

RF Shaver Mode (recommended)

1 Apply shaving foam or shaving gel evenly to your face

2 Turn on the device

Press and hold down the power button.
RF Shaver Mode will be selected automatically.

3 Shave

When finished, press and hold down the power button to turn off the power.

4 Rinse your face

5 Clean the head

How to shave proficiently (RF Shaver Mode/Shaver Mode)

Lightly apply the blade to your skin and move the device in a circular motion.

(Example) Cheeks: stretch your skin so that the facial hairs stand up, then shave while moving the device in small circles.

* If you are a first-time user, it may take 2 to 3 weeks to become used to shave appropriately.

* If you use the device over makeup, the foundation may cause dark staining of the skin.

• **The feeling of warmth generated by RF (Radio Frequency) depends on the type of shaving agent and skin condition at the time of use.**

***Do not apply the device too hard against the skin.**

***Be sure to use the product while moving it over the skin, as continually applying it to a single spot may cause burns.**


***If it feels hot, move the head a little quicker.**

• If you have a long beard, please trim it short using a Trimmer head before shaving with a shaving head.




Shaving guide for the different parts of the face

Cheeks

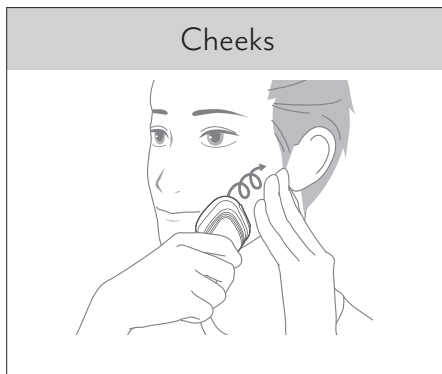

Stretch your skin with your free hand, so that the facial hairs stand up. Then shave while moving the device in small circles.


Under the chin

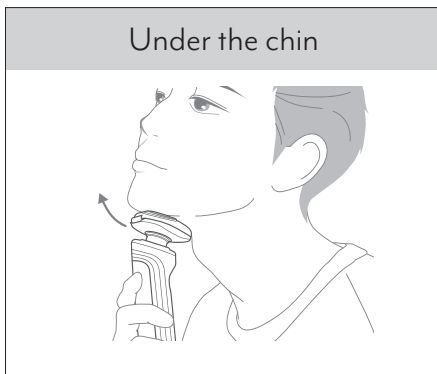

Move device to an upward direction as if you are lightly pushing up your chin with the head. A tip is to move the device against the direction of beard growth.

*Switch to Shaver Mode when you are shaving around an Adam's apple.

Under the nose

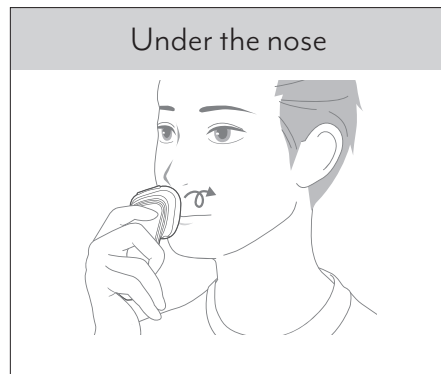

Stretch skin under the nose. Shave with one or two rotary blades using an edge of the head. Snap your wrist to rotate the head in small circular movements.

ATTENTION

- Make sure there is no water on the charging terminal before connecting the device. Failure to comply may cause an electric shock, short circuit, fire, or a malfunction of the device.
- Never charge the device in the bathroom.
- Be sure to remove makeup before using the device.
- Do not apply the shaver on the throat or Adam's apple when using RF Shaver Mode or RF Mode.
- Always ensure there is an adequate amount of shaving foam or shaving gel between the electrodes and your skin, and add it as needed while shaving. If there is not enough shaving foam or shaving gel, warm sensation may be reduced.
- **The feeling of warmth generated by RF (Radio Frequency) depends on the type of shaving agent and skin condition at the time of use.**
 - *Be sure to use the product while moving it over the skin, as continually applying it to a single spot may cause burns.**
 - *If it feels hot, move the head a little quicker.**